



RM Tape Library Interlock Kit Installation Information

EK-TPLBR-IN. A01

May 1999

Introduction

The 2T-QINTL-TL interlock kit contains the components for installing the slide assemblies, the interlock system, and the shipping bracket on the rackmounted tape library. The interlock system helps prevent cabinet instability by allowing only one system at a time to be pulled out of the cabinet. The shipping bracket is used to secure the tape library in the cabinet during shipment or when moving the cabinet to a new location.

The interlock system consists of a vertical rod, on which are mounted actuator latches for each product installed in the cabinet. These actuator latches engage the interlock actuator on the rear of rackmount systems. When a rackmount system is pulled out of the cabinet, the actuator latches rotate to prevent any other rackmount system that has an interlock actuator from being pulled out of the cabinet.

Table 1 lists the parts that are shipped with the 2T-QINTL-TL interlock kit. The callouts in column 1 refer to the part location in Figure 1.

Table 1 2T-QINTL-TL Interlock Kit Parts List

Callout	Description	Part Number	Qty.
❶	Slide bracket, right and left front	12-44537-01	2
❷	Slide bracket, right and left rear	12-44537-02	2
❸	8-32 pan-head screw	90-06038-01	8
❹	Flat washer, .190ID x .051THK	90-06660-00	8
❺	Split washer, .171ID	90-06690-00	8
❻	8-32 hex nut	90-06561-00	8
❼	M6 nut bar	74-53977-02	4
❽	Interlock actuator	74-60570-01	1
❾	6-32 truss-head screw	90-00063-15	2
❿	Stabilizer bracket	74-48996-01	1
①	Actuator latch	74-48997-02	1
②	10-32 threaded nut bar	74-48998-01	1
③	10-32 truss-head screw	90-00063-39	2
④	6-32 truss-head screw	90-00063-10	2
⑤	Shipping bracket	74-60569-01	1
⑥	8-32 truss-head screw	90-00063-22	2
⑦	Flat washer, .221ID x .051THK	90-06664-00	2
⑧	8-32 Kep nut	90-06563-00	2
⑨	Flat washer, .286ID x .066THK	90-06676-00	2
⑩	Split washer, .263ID	90-07797-00	2
1	M6 screw	90-40005-16	2
2	Cage nut	90-11476-01	2
	<i>RM Tape Library Interlock Kit Installation Information</i>	EK-TPLBR-IN	1

© Compaq Computer Corporation. 1999. All Rights Reserved.

® Compaq and the Compaq logo are registered in the United States Patent and Trademark Office.

Installing the Slide Assemblies

The rackmount tape library requires 35.56 cm (14.00 in.) of vertical space or 24 contiguous holes in a 48.26-cm (19-in) EIA cabinet. The bottom hole in this installation area (4) is identified as hole 1 and the top hole is identified as hole 24 (see Figure 1).

In the following installation procedures, directions are referred to while viewing the rackmount tape library from the front of the cabinet. To install the slide assemblies, refer to Figure 1 and the following procedures:

1. Remove the inner races from the right and left slide assemblies. Set the inner races aside.
2. Attach the right front slide bracket ❶ (P/N 12-44537-01) to the right slide assembly with two 8-32 pan-head screws ❸, flat washers ❹, split washers ❺, and 8-32 hex nuts ❻.
3. Attach the right rear slide bracket ❷ (P/N 12-44537-02) to the right slide assembly with two 8-32 pan-head screws ❸, flat washers ❹, split washers ❺, and 8-32 hex nuts ❻, but *do not* tighten.
4. Attach the left front slide bracket ❶ (P/N 12-44537-01) to the left slide assembly with two 8-32 pan-head screws ❸, flat washers ❹, split washers ❺, and 8-32 hex nuts ❻.
5. Attach the left rear slide bracket ❷ (P/N 12-44537-02) to the left slide assembly with two 8-32 pan-head screws ❸, flat washers ❹, split washers ❺, and 8-32 hex nuts ❻, but *do not* tighten.
6. Place the right front slide bracket ❶ on the inside of the right front rail and align two holes of the M6 nut bar ❹ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the right front rail. Install two M6 screws (3) in the 2nd and 4th holes of the installation area to secure the right front slide bracket to the right front rail.
7. Place the right rear slide bracket ❷ on the inside of the right rear rail and align two holes of the M6 nut bar ❹ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the right rear rail. Install two M6 screws (3) in the 2nd and 4th holes of the installation area to secure the right rear slide bracket to the right rear rail. Tighten the two 8-32 pan-head screws ❸ and 8-32 hex nuts ❻ that secure the right rear slide bracket to the right slide assembly.
8. Place the left front slide bracket ❶ on the inside of the left front rail and align two holes of the M6 nut bar ❹ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the left front rail. Install two M6 screws (3) in the 2nd and 4th holes of the installation area to secure the left front slide bracket to the left front rail.
9. Place the left rear slide bracket ❷ on the inside of the left rear rail and align two holes of the M6 nut bar ❹ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the left rear rail. Install two M6 screws (3) in the 2nd and 4th holes of the installation area to secure the left rear slide bracket to the left rear rail. Tighten the two 8-32 pan-head screws ❸ and 8-32 hex nuts ❻ that secure the left rear slide bracket to the left slide assembly.
10. Attach the right inner race to the right side of the tape library chassis and the left inner race to the left side of the tape library chassis.
11. Pull both slide assemblies out fully to their locked positions, then lift the chassis and position it so that the inner races fit into the front end of the slide assemblies. Push the chassis into the slide assemblies until it stops, then release the two locking levers and push the chassis all the way into the cabinet.


Installing the Interlock System

In the following installation procedures, directions are referred to while viewing the rackmount tape library from the rear of the cabinet. To install the interlock system, refer to Figure 1 and the following procedures:

1. Mount the interlock actuator ❸ on the lower right rear of the tape library chassis using two 6-32 truss-head screws ❹.
2. Remove the screws securing the vertical rod's bottom mounting bracket to the cabinet and slide the mounting bracket off the bottom of the vertical rod.
3. Slide the stabilizer bracket ❶ for the new product onto the bottom of the vertical rod.

4. Slide the actuator latch ① for the tape library onto the bottom of the vertical rod.
5. Replace the vertical rod's bottom mounting bracket and install the screws removed in step 2 but *do not* tighten them.
6. Position the stabilizer bracket ⑩ so that the bottom hole in the stabilizer bracket is aligned with the 12th hole of the installation area and the top hole in the stabilizer bracket is aligned with the 15th hole of the installation area on the right rear cabinet rail.
7. Place the nut bar ② behind the right rear cabinet rail and install and tighten the two 10-32 truss-head screws ③ provided to secure the stabilizer bracket ⑩.
8. Position the actuator latch ① to properly engage the interlock actuator, and tighten the two 6-32 set screws to secure the actuator latch to the vertical rod.
9. Now tighten the screws to secure the vertical rod's bottom mounting bracket.

Figure 1 Installing the 2T-QINTL-TL Interlock Kit

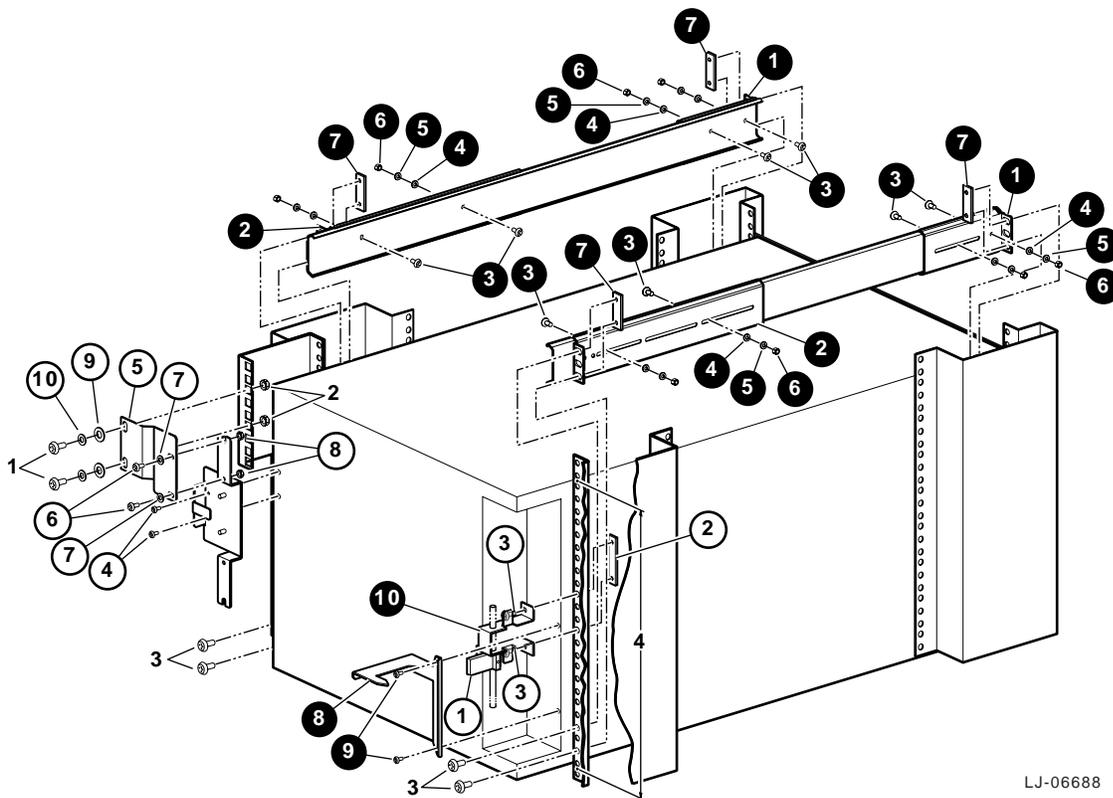

LJ-06688

Installing the Shipping Bracket

In the following installation procedures, directions are referred to while viewing the rackmount tape library from the rear of the cabinet. The shipping bracket is used to secure the tape library in the cabinet during shipment or when moving the cabinet to a new location. To install the shipping bracket, refer to Figure 1 and the following procedures:

1. **Removing and replacing one screw at a time**, remove the two screws securing the cable carrier mounting bracket to the chassis and replace with two 6-32 truss-head screws ④.
2. Secure the shipping bracket ⑤ to the top arm of the cable carrier mounting bracket with two 8-32 truss-head screws ⑥, flat washers ⑦, and 8-32 Kep nuts ⑧.
3. Align the top hole on the left side of the shipping bracket with the 24th hole of the installation area on the left rear extender rail.
4. Secure the shipping bracket ⑤ to the left rear extender rail with two flat washers ⑨, two split washers ⑩, two M6 screws (1), and two cage nuts (2).